



Installation Manual


Fill Valve Installation

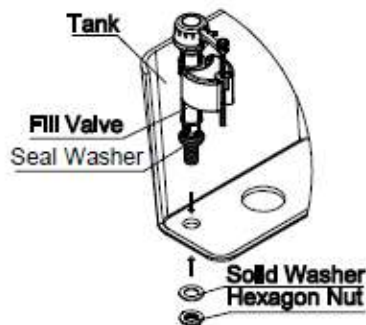


Unload the hexagon nut and solid washer from the fill valve. Insert the fill valve into the toilet inlet vertically, then nest the solid washer and hexagon nut into the fill valve connector in turn from outer tank.

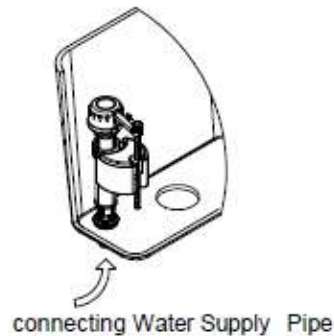

Before connecting the water supply pipe with the fill valve, remember to turn on water to clean the water supply pipe first, to avoid impurity entering the fill valve and affecting the function and duration of fill valve.

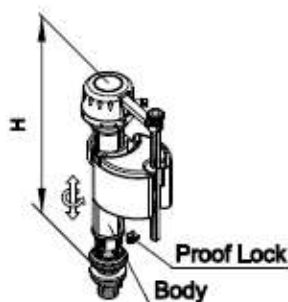

Unload the proof lock as indicated above. Unscrew the adjustable body clockwise and lift it up or down to an appropriate height between 8" and 12.5", then screw the body counterclockwise until you hear "click", and replace the proof lock.

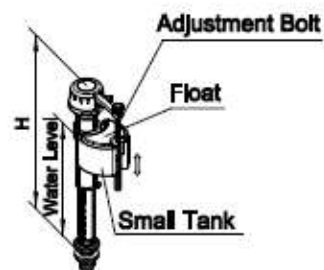

Move the small tank to adjust the water level. After fixing the small tank, screw the adjustment bolt to make the float stay in the right position inside small tank. Then turn on the water supply to check and see whether the fill valve can operate normally. If can't, please adjust the position of float again.