

Refrigerant charging scale



VES-50A/VES-100A



VES-50B/VES-100B

Quantitative filling precision control

Easy operation schematic

- 1 Open the electrical scale
- 2 Place the refrigerant tank and clear the electrical scale
- 3 Enter the filling and recovery function, enter the net weight values of the refrigerant, and press OK
- 4 When close to fixing weight of filling/recovery, electronic scale will alarm or automatic shut down the valve, and prompts the filling/recovery has been completed
- 5 After filling/recovery, stop the scale manually, and press OK

VES-50A/VES-100A

Accurate Measurement



Anti-collision



The recovery/ recycling weight can be set, convenient for operation

Model	VES-50A	VES-100A
Weighting range	50Kg	100Kg
Resolution	2 g	5 g
Accuracy	±0.05%	
Display	LCD	
Power	DC 9V, at least 80h working time	
Working environment	-10°C~40°C, ≤75% Humidity	
Platform size	237×237 mm	
Weight	4Kg	
Anti-collision	Yes	

VES-50B/VES-100B

Accurate Measurement



High precision valve, accuracy control, filling weight ±5g



Anti-collision



The recovery/ recycling weight can be set, convenient for operation

Quantitative filling precision control

Model	VES-50B	VES-100B
Weighting range	50Kg	100Kg
Resolution	2 g	5 g
Accuracy	±0.05%	
Display	LCD	
Power	DC9V& AC(110V~240V)	
Working environment	-10°C~40°C, ≤75% Humidity	
Platform size	237×237 mm	
Weight	4Kg	
Anti-collision	Yes	
Automatic shut-off	Yes	